

# BT700

## Touch-Screen HMI Terminal for Use with motrona Controllers



## Operating Instructions



## Safety Instructions

- This manual is an essential part of the unit and contains important hints about function, correct handling and commissioning. Non-observance can result in damage to the unit or the machine or even in injury to persons using the equipment!
- The unit must only be installed, connected and activated by a qualified electrician
- It is a must to observe all general and also all country-specific and application-specific safety standards
- When this unit is used with applications where failure or maloperation could cause damage to a machine or hazard to the operating staff, it is indispensable to meet effective precautions in order to avoid such consequences
- Regarding installation, wiring, environmental conditions, screening of cables and earthing, you must follow the general standards of industrial automation industry
- - Errors and omissions excepted –

This product is manufactured by



and in this context intended for use as a  
proved and recommended accessory part  
with motrona motion control products

# Table of Contents

<b>1. PWS6600 Installation .....</b>	<b>4</b>
1.1. Introduction .....	4
1.2. Safety Precautions .....	4
1.3. General .....	4
1.4. Package Contents .....	6
1.5. Mounting Procedure .....	6
1.6. Grounding .....	6
1.7. Power Supply and Wiring .....	7
1.8. External and Cut-out Dimensions .....	7
1.9. Description of Parts .....	8
1.10. Product Specifications .....	9
1.11. Communication Ports .....	10
1.12. Dip Switches .....	11
<b>2. PWS6600 Operation .....</b>	<b>12</b>
2.1. Self Test .....	12
2.2. System Menu .....	13
2.3. Keypad .....	13
2.4. Bench and Function Tests .....	14
2.5. Setting Communication Parameters .....	14
2.6. Downloading an Application .....	14
2.7. Uploading an Application .....	15
2.8. Uploading / Downloading a Recipe .....	16
2.9. Copying an Application .....	17
2.10. Setting a Password .....	17
<b>3. Screen Editor for PWS .....</b>	<b>19</b>

# 1. PWS6600 Installation

## 1.1. Introduction

PWS6600 is a Human Machine Interface (HMI) with a 5.7" TFT Liquid Crystal Display, and is water- and dust-resistant according to IP65/NEMA4.

The HMI is CE-marked and meets your need to be highly transient-resistant while in operation.

Also, its compact design makes connections with other machinery more flexible, thus achieving the optimal performance of your machines.

ADP is used to design applications of the HMI; it is reliable, user-friendly and compatible with many models.

The latest released ADP Version 6.1 and above can be used to design applications for the HMI.

## 1.2. Safety Precautions

Both the installer, the owner, and the operator of this HMI must read and understand this installation manual.

## 1.3. General

- Only qualified personnel may install or operate the HMI.
- The HMI must be installed according to the installation instructions.
- The HMI is designed for stationary installation on a plane surface, where the following conditions are fulfilled:
  - no high explosive risks
  - no strong magnetic fields
  - no direct sunlight
  - no large, sudden temperature changes
- Never allow fluids, metal filings or wiring debris to enter any openings in the HMI. This may cause fire or electrical shock.
- The HMI fulfills the requirements of article 4 of EMC directive 89/336/EEC.
- Storing the HMI where the temperature is lower/higher than recommended in this manual can cause the LCD display liquid to congeal/become isotopic.
- The LCD display liquid contains a powerful irritant. In case of skin contact, wash immediately with plenty of water. In case of eye contact, hold the eye open, flush with plenty of water and get medical attention.
- The supplier is not responsible for modified, altered or reconstructed equipment.
- Use only parts and accessories manufactured according to specifications of the supplier.
- Peripheral equipment must be appropriate for the application and location.
- The figures in this manual serves an illustrative purpose. Because of the many variables associated with any particular installation, the supplier cannot assume responsibility for actual use based on the figures.

- The supplier neither guarantees that the HMI is suitable for your particular application,
- nor assumes responsibility for your product design, installation or operation.

### **Power Source**

- The HMI is equipped with a 24 V DC input. Supply power other than 24 V DC  $\pm$  15% will severely damage the HMI. Thus, check the power supply supporting the DC power regularly.
- To avoid electric shock, be sure the power cable is unplugged from the power outlet when connecting the cable to the HMI.

### **Installation**

- Communication cables must be separated from the power cables for operational circuits. Use shielded cables or it may cause unpredictable problems.

### **During Use**

- Emergency stop and other safety functions may not be controlled from the HMI.
- Do not use force or sharp objects when touching the keys, display etc.

### **Service and Maintenance**

- Only qualified personnel should carry out repairs.
- Before carrying out any cleaning or maintenance operations, disconnect the equipment from the electrical supply.
- Clean the display and surrounding front cover with a soft cloth and mild detergent.
- Replacing the battery incorrectly may result in explosion. Only use batteries recommended by the supplier.

### **Dismantling and Scrapping**


- The HMI or parts thereof shall be recycled according to local regulations.
- The following components contain substances that might be hazardous to health and the environment: lithium battery, electrolytic capacitor and display.



#### **Note:**


Indicated loss of life, severe personal injury, or substantial property damage will result if proper precautions are not taken.

## 1.4. Package Contents

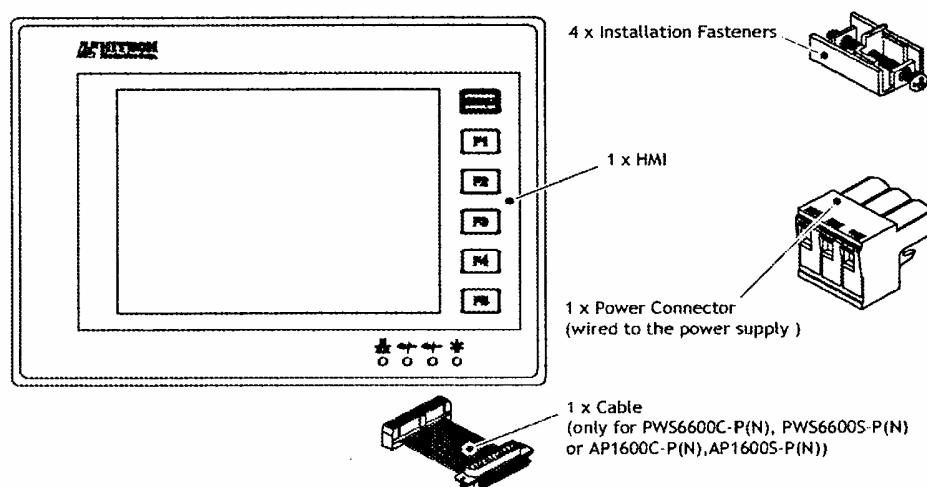

## 1.5. Mounting Procedure

1. Cut out the control front panel to match the dimensions (mm) specified under the External and Cut-out dimensions chapter.
2. Mount the HMI into the cut-out. Insert the fixtures to the holes on the unit and fasten the screws into the front panel. Do not tighten the screws with too much or uneven force, or it may cause deformation of the HMI.

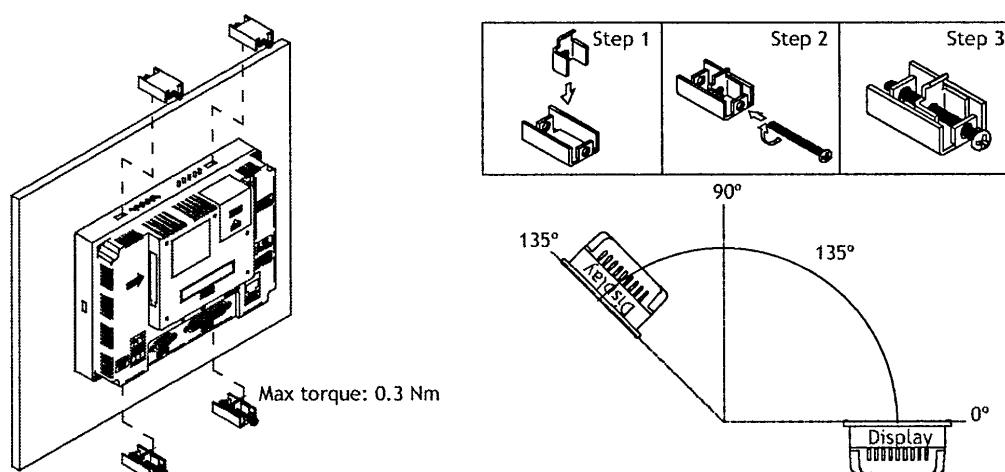

3. The HMI must be installed within an angle of 0° to 135° as shown above.

## 1.6. Grounding

Make sure that the HMI works properly. To prevent it from radiating radio frequency noise, the HMI must be connected to earth ground.

- Without grounding, the HMI may be severely affected by excess noise. Make sure that the grounding is done properly from the power connector at the rear side of the HMI. When power is connected, make sure that the wire is grounded.
- Use a cable of at least 2 mm<sup>2</sup> (AWG 14) to ground the HMI. Ground resistance must be less than 100 Ohms (class3). Note that the ground cable must not be connected to the same ground point as the power circuit.

## 1.7. Power Supply and Wiring

The HMI must use a power supply with 24 V DC and the power consumption is 20W.



### Warning:

To avoid an electric shock, be sure to switch off the power before connecting the communication/download cable to the HMI.

### Steps to wire


1. Unplug the power connector and unscrew the screws.
2. Strip about 1 cm of insulation. Insert the wire all the way into the power connector and then turn the screws tight.
3. Plug in the connector to the power outlet of the HMI.




### Note:

Power connector is already plugged in the power outlet of the HMI when the package is first opened.

## 1.8. External and Cut-out Dimensions

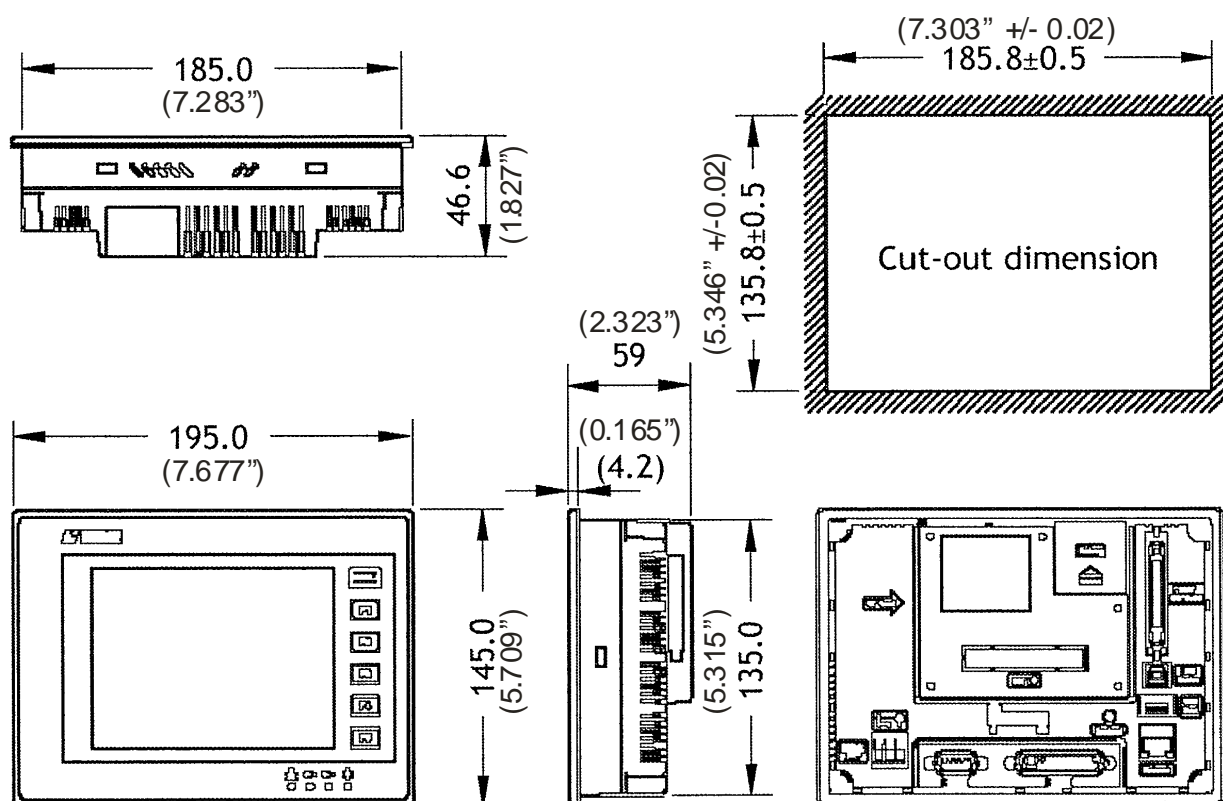

## 1.9. Description of Parts

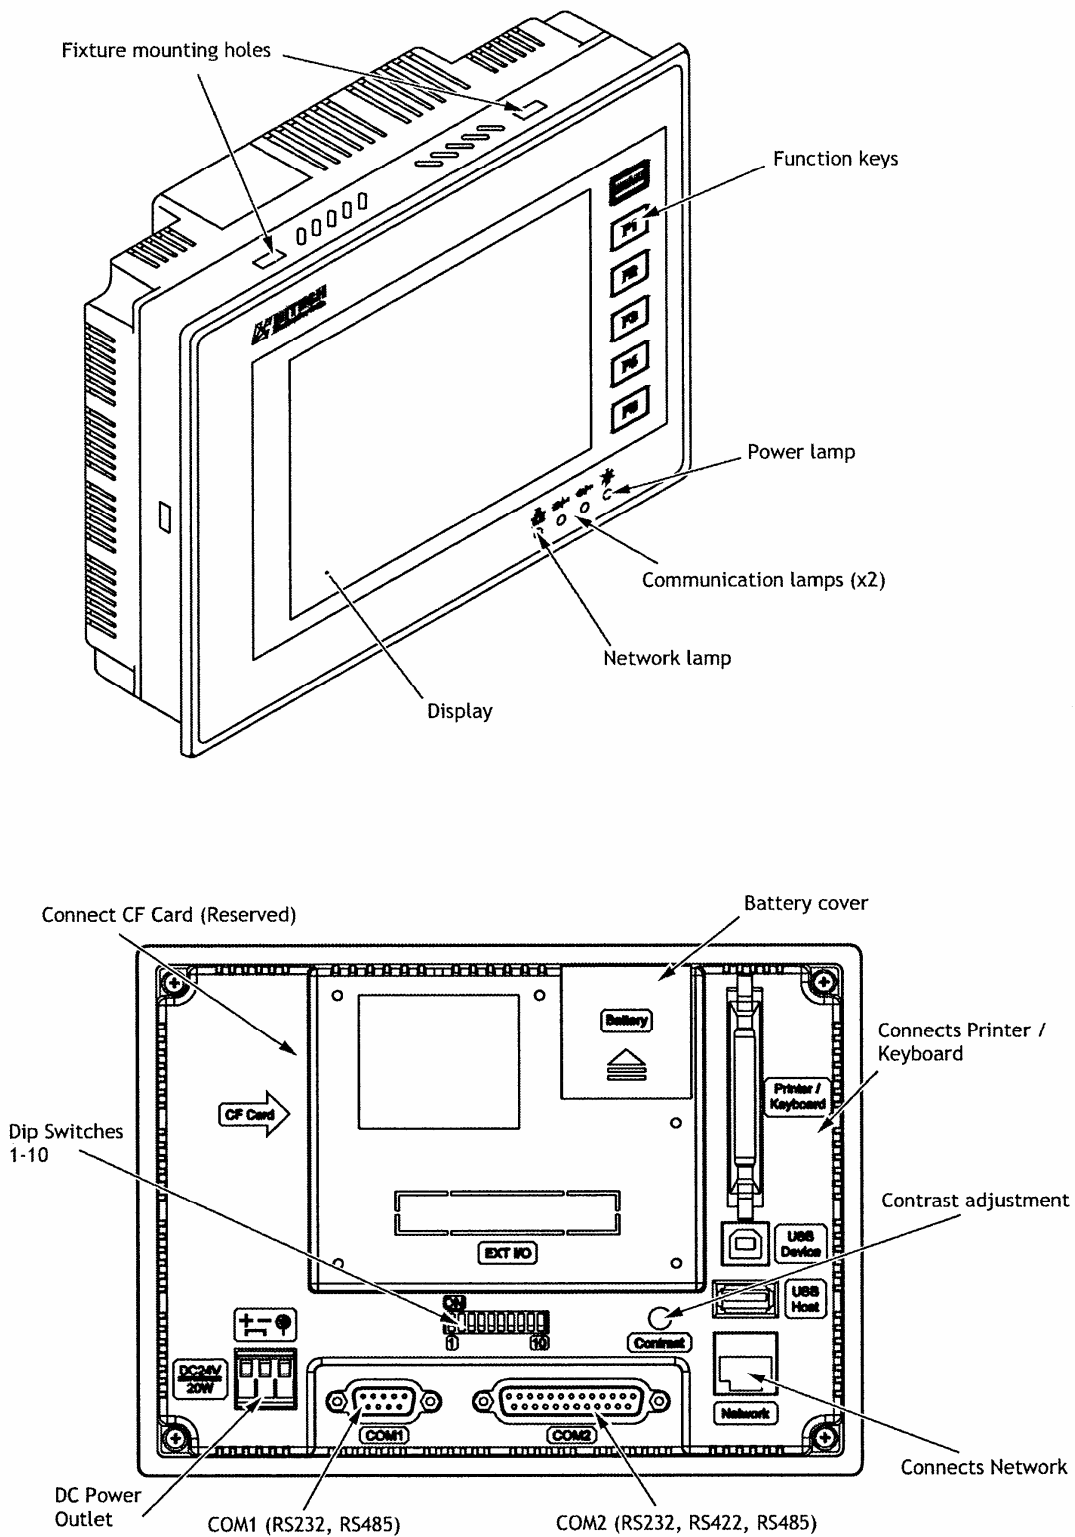



## 1.10. Product Specifications

Item	PWS 6600C-N AP 1600C-N	PWS 6600C-P AP 1600C-P	PWS 6600C-S AP 1600C-S	PWS 6600S-P AP 1600S-N	PWS 6600S-P AP 1600S-P	PWS 6600S-S AP 1600S-S
Display Type	Color TFT LCD			Mono STN LCD		
Display Color	256 colors			16 shades of blue		
Display size	5.7"					
Display resolution	640 x 480, Number of 8 x 8 characters displayable 80 x 60					
Display adjustment	Via touch panel & VR on the back					
Back light	CCFT, Lifetime 75,000 hours @ 25 degrees Celsius			CCFT, Lifetime 50,000 hours @ 25 degrees Celsius		
Touch Screen	Analog					
Keypad 1	Menu key and 5 user-defined Function keys (F1-F5)					
Keypad pressure and lifetime	350+-50 gf operating force, lifetime is over 1 million activations					
Input Power	24 V DC +-15%, less than 20W					
Flash ROM	4 Mb					
RAM	512 K byte					
CPU	32 bits RISC					
Battery backed memory	512 K byte					
RTC	YES (rechargeable lithium battery)					
Data/Recipe	512 K byte		-	512 K byte		
COM1	9-pin female connector, RS232 and RS485					
COM2	25-pin female connector, RS232,RS422 and RS485					
Multi-functional port	26-pin connector to printer or 64 external keys		-	26-pin connector to printer or 64 external keys		
Ethernet	YES	-	-	Yes	-	-
Front Panel	seal IP65 / NEMA 4					
Operating temperature	0° - 50°degrees Celsius					
Storage temperature	-10° - 60° degrees Celsius					
Ambient humidity	20-90% (non-condensing)					
Vibration endurance	0.5 mm displacement, 10-55 Hz, 2 hours per X, Y, Z axis directions					
Shock endurance	10 G, 11 ms three times in each direction of X, Y, Z axes					
RF Emissions	CISPR 22, Class A					

Item	PWS 6600C-N AP 1600C-N	PWS 6600C-P AP 1600C-P	PWS 6600C-S AP 1600C-S	PWS 6600S-P AP 1600S-N	PWS 6600S-P AP 1600S-P	PWS 6600S-S AP 1600S-S
Electrostatic discharge	IEC61000-4-2					
RF Susceptibility	IEC61000-4-3					
High Frequency Transients	IEC61000-4-4					
External dimensions	195.0 x 145.0 x 59.1 mm					
Cut-out dimensions	185.8 x 135.8 mm					
Weight	0.81 kg					
Cooling	Natural cooling					



**Note:**


When using the HMI for the first time, remember to reset Real Time Clock (RTC).

## 1.11. Communication Ports

- COM 1 is a 9-pin female connector used to connect a controller and the HMI via RS232 or RS485
- COM 2 is a 25-pin female connector used to connect a controller and the HMI via RS232, RS422 or RS485

Please make sure that the connection is in accordance with the setting of the dip switches. (For example, , RS485 with SW9 and SW10=ON).

For illustration on the connection between the HMI and a controller, please consult the information on the controller.

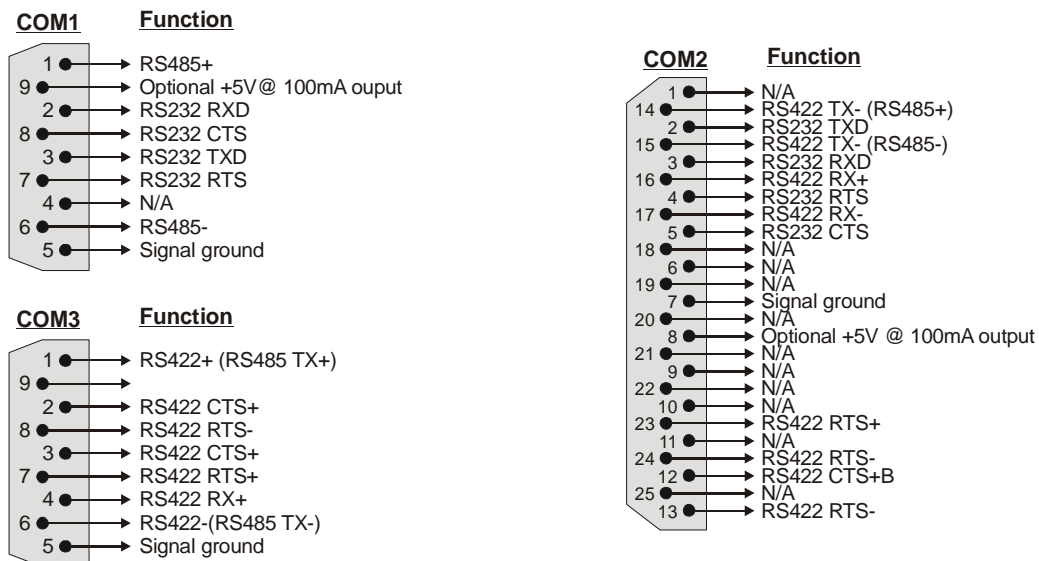

## 1.12. Dip Switches

Dip Switches		Function
SW 1		Reserved
SW 2		Reserved
SW 3	SW 4	Operation Mode
ON	ON	Runs user application
ON	OFF	Runs burn-in test program
OFF	ON	Updates BIOS
OFF	OFF	Runs bench test program
SW 5		Communication Parameters
ON		The HMI uses parameters defined on the Configuration Screen for controller communications
OFF		The HMI uses parameters defined in ADP for controller communications
SW 6		Password
ON		The HMI asks the operator to enter a password after power-on selftest
OFF		No password is required to start the HMI
SW 7		System Menu
ON		The HMI displays System Menu
OFF		The HMI runs user application without displaying System Menu
SW 8		Default user level
ON		The default user level is set to 1 if the HMI requires no password to start its operation
OFF		The default user level is set to 9 if the HMI requires no password to start its operation
SW 9		COM 1 Port
ON		For RS485 this switch has to be set ON
SW 10		COM 2 Port
ON		For RS485 this switch has to be set ON
OFF		For RS422 this switch has to be set OFF

## 2. PWS6600 Operation

### 2.1. Self Test

Once the HMI is turned on, it will automatically execute a self-test to check its hardware. The result of a self-test is displayed on the LCD. See below for items to check in a self-test:


Human Machine Interface ROM BIOS Version 1.6 (C) 2005 Hitech Beijer Electronics	
Display Type = Mono STN LCD	
System RAM Size	256K Bytes
Video RAM Size	256K Bytes
Battery Backed RAM Size	512K Bytes
Application Memory Size	4M Bytes
Working RAM Test	Passed
Battery Status	Passed
BIOS ROM Checksum	Passed
Firmware Checksum	Passed
Application Checksum	Passed
RTC Function Test	Passed
Parameter Checksum	Passed
Communication Port 1 Test	Passed
Communication Port 2 Test	Passed
DIP Switches Setting(8..1)=	11011111

If any of tests does not pass the self-test, it will be noted with "Failed" next to the test item. Additionally, the message "Error! Press screen to continue" will be displayed at the bottom of the screen.

If the power to the HMI or the PC was interrupted while downloading, **Firmware checksum** or **Application checksum** will not pass the self-test, indicated by "Failed" in the self-test results after power is restored. If this happens, the user can simply follow the download procedure to re-download the application or data. After downloading again, all items should pass the self-test.

## 2.2. System Menu

Set the dip switch SW7=ON. After the self-test, the system menu of the HMI is displayed on the screen:

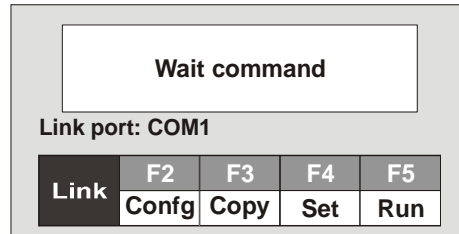


The functions of the commands are briefly explained below:

System Menu	Function
Link	The HMI is connected.
F2 - Config	Sets up the internal time clock and communication parameters in the HMI. All the settings has to be made for the HMI to work properly. Use $\uparrow$ , $\downarrow$ , $\leftarrow$ , and $\rightarrow$ to move to desired field; + and - to set the value of the field.
F3 - Copy	Copies application data to another HMI.
F4 - Set	Calibrates the touch screen, adjusts LCD contrast and clears RAM data.
F5 - Run	Runs the application.

## 2.3. Keypad

The eight keys on the HMI include one menu key and seven functional keys (**F1 - F5**). Press the menu key to slide out the innovative slide-out menu. For further details on the slide-out menu please see the ADP User's Manual

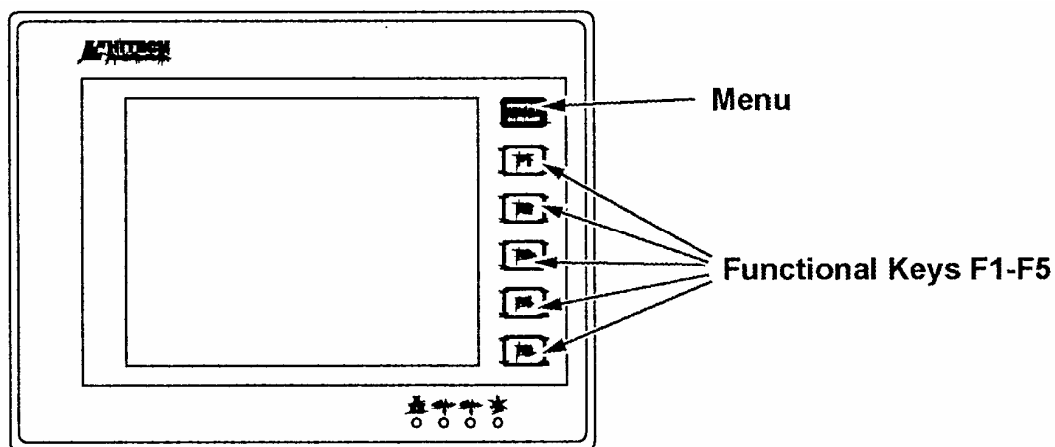

When a key is pressed, the HMI will make a “beep” sound to signal that a command is pressed. (The default setting is a 200 ms beep, and can be configured.)

## 2.4. Bench and Function Tests

Set the dip switches SW3 and SW4=OFF to be able to run the bench and function tests for the HMI. Turn on the HMI and the following screen will be displayed.

F1	F2
Bench Test	Function Test

The bench test performs an overall hardware test and the function test lets the user select which item to be tested.



**Note:**

The bench test will clear the application data of the HMI.

## 2.5. Setting Communication Parameters

There are two ways to configure working parameters; to set parameters in the HMI or in ADP.

To set parameters in the HMI, select **F2 - Config** in the system menu.



**Note:**

Remember to set the dip switch **SW5=ON** if parameters are set in the HMI

To set parameters in ADP, select **Application / Workstation Setup**. Then select the Connection tab to set **communication** parameters.



**Note:**

Remember to set the dip switch **SW5=OFF** if parameters are set in ADP

## 2.6. Downloading an Application

Connect the RS232 port on the PC to the COM1 port on the HMI using a WPCP8- 42 cable. The connection can also be made according to the illustration below.

PWS-COM1 9-pin male	PC COM RS232 9-pin female	PWS-COM2 25-pin male	PC COM RS232 9-pin female
RXD 2	2 RD	TXD 2	2 RD
TXD 3	3 SD	RXD 3	3 SD
GND 5	5 SG	GND 7	5 SG
RTS 7	1 CD	RTS 4	1 CD
CTS 8	4 DTR	CTS 5	4 DTR
	6 DSR		6 DSR
	7 RTS		7 RTS
	8 CTS		8 CTS
PWS ----- PC COM		PWS ----- PC COM	




**Warning:**

To avoid an electronic shock, be sure to switch off the power before connecting the download cable to the HMI.

Set the dip switch **SW7 = ON**. After the self-test, the system menu will be displayed on the screen and the HMI is ready to download the application.

Start ADP and open the application file to be downloaded. Make sure that the communication parameters are correctly configured. Also remember to compile the file before downloading it. The file has to be compiled every time a change has been made in the file before downloading it.

Then select **Application/Download Firmware** and then **Application** in ADP if it is a first time to download the application to the HMI; otherwise, select **Application/Download Application**. The following appears on the screen while the HMI is downloading:

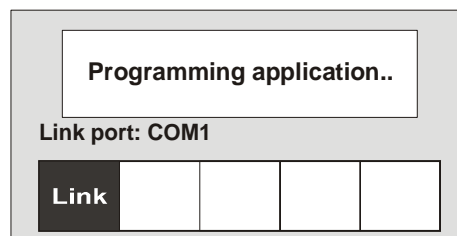

## 2.7. Uploading an Application

An application can also be uploaded from the HMI to the PC. Thus, a user can save an application as a \*.V6F file in ADP for future use.




**Warning:**

To avoid an electric shock, be sure to switch off the power before connecting the communication cable to the HMI.

Make sure that the HMI and the PC are connected according to section "Downloading an Application". Set the dip switch **SW7 = ON**. After the self-test, the system menu will be displayed on the screen and the HMI is ready to upload the application.

Also make sure that communication parameters are correctly configured. Select **File/Upload Application** in ADP and the **Save As** dialog box will appear on the screen. Enter the name of a firmware file (\*.AF6) to save. Click Save. Then the HMI will prompt for a password: enter the password set in ADP from **Application/Workstation Setup**. Once the correct password is entered, the HMI starts to upload the application to the PC. For information about setting a password, please see section "Setting a Password".

While the HMI is uploading, the following is displayed:

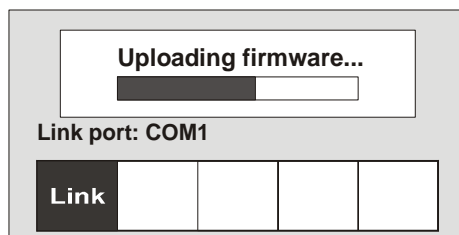

After uploading, select File/Reconstruct Source in ADP to display the Open dialog. Open the uploaded application file (\*.C64 or \*.AA6). The application screen will be displayed on the PC monitor. Finally, select File/Save As to save the application as a \*.V6F file. Thus a source file can serve the purposes of maintenance and modification.



**Note:**

When using the HMI for the first time, reset the real time clock (RTC).

## 2.8. Uploading / Downloading a Recipe


Set the dip switch **SW7 = ON**. After the self-test, the system menu will be displayed on the screen and the HMI is ready to upload/download a recipe.

### Uploading a Recipe

Select **File/Upload Recipes** in ADP and the **Save As** dialog box will appear on the screen. Enter the name of a recipe file (\*.RCP) to save. Click Save. While the HMI is uploading the recipe, **Uploading recipes** is displayed on the screen.

### Downloading a Recipe

Open an application file with the recipe to be downloaded in ADP. Select **File/Download Recipes** to display the **Open** dialog. Enter the name of the recipe file (\*.RCP) and click Open. While the HMI is downloading the recipe, **Downloading recipes** is displayed on the screen:

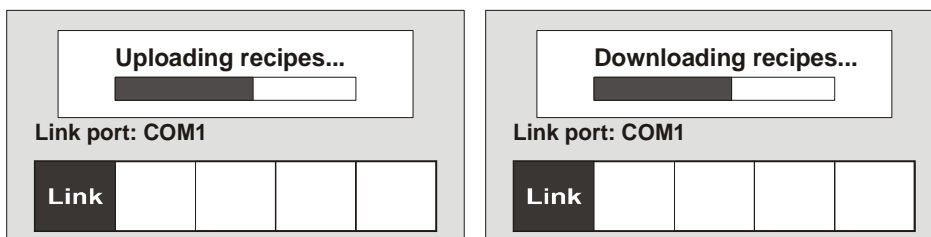

After the download is finished, select F5 - Run to run the application.

Remember to define the length and the number of recipes in the application. Also remember to upload the format of recipes from the HMI before starting to edit a new set of recipe data in the PC.


For further information about creating/editing recipes, please see the corresponding chapter in the ADP User's Manual.



## 2.9. Copying an Application

To copy an application from one HMI to another, select **F3 - Copy** from the system menu. Set the dip switch **SW7 = ON** and connect the two HMIs with a download cable. After the self-test, the system menu will be displayed on the screen.

Select **F3 - Copy** in the system menu from the HMI with the application to be copied. The HMI will prompt for a password: enter the password set in ADP from **Application/Workstation Setup**. Once the correct password is entered, the HMI will start to copy the application between the two HMIs. The following appears on the screens during the copying:

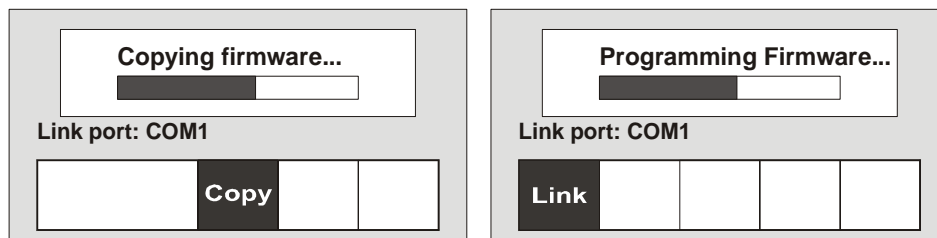

### Note:

If it is the first time to copy, please remember to run the application.


## 2.10. Setting a Password

### Scenario 1: Requiring a password to start the HMI

If the dip switch **SW6 = ON**, the user needs to enter a password to start the HMI.

For this purpose, the designer can use the object **Action Button** in ADP to create a button which displays the password table on the HMI display. A user with the right to access the table can register passwords and user levels in the table. In the illustration below, the TBL-button is an action button used to display the password table.

When the button is selected the password table is displayed on the screen for a user with the right to access the table. Touch the password to highlight an area for entering a value.

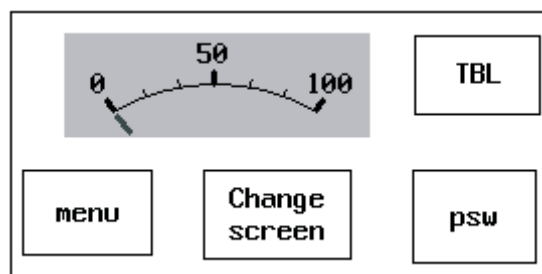

In the illustration above, the TBL-button is an action button used to display the password table. When the button is selected the password table is displayed on the screen for a user with the right to access the table. Touch the password to highlight an area for entering a value.

How to configure an **Action Button** is described in the ADP User's Manual.

After registering passwords and user levels, set the dip switch SW6 = ON (i.e. password required). Restart the HMI and after the self-test the user will be prompted to enter a password in order to run the HMI. The HMI will determine the user level from the entered password. For instance, if the level of the password entered by the user is 2, then the HMI will set the user level to 2. User level 1 has the highest privilege and User level 9 has the lowest.



**Note:**

Only users of User Level 1 has the right of access to the password table.  
PWS6600 Operation

### Scenario 2: Re-entering a password

The object Action Button in ADP also allows the designer to create a button which asks the user to re-enter a password. For example, by pressing the **PSW**-button the password keypad will be displayed to prompt the user to enter a password. After entering the password, the HMI will update the user level according to the most recent password which has been entered. Therefore, this button can be applied to raise or drop one's privileges while the HMI is in operation.



How to configure an Action Button is described in the ADP User's Manual.

### Scenario 3: Password-protecting a button in the HMI

The ADP can create a button which is protected by a password for execution. For example, a Goto Screen button can be designed with a high level of security; which means that a password with a high level of privilege is required in order to open the other screen. As the button is selected and the current user has a lower privilege than has been set for the button, the HMI will prompt the user for a password. The user will need a password with at least the level of privilege that has been set for the button. This function can restrict users to access to certain parts of the application.

#### **Scenario 4: Requiring a password to copy or upload application**

When selecting F3 - Copy in the system menu or File/Upload Application in ADP, the HMI will prompt for a password. The user will need to enter the correct password to copy an application from one HMI to another. Note that setting this password is different from the passwords set in Scenarios 1-3. To set this password, select Application/Workstation Setup in ADP. Under the Password tab, the project designer is able to set the password.

### **3. Screen Editor for PWS**

The software ADP6 is available from the following websites.

- <http://www.hitechsite.com>
- <http://www.hitechsite.com.tw>